LOCKING DEVICE INSTALLATION INSTRUCTIONS



WARNING – USE OF LOCKING DEVICES



- Always keep your firearm pointed in a safe direction, including when you are installing or removing your locking device.
- Always verify that your firearm is completely <u>unloaded</u> before installing your locking device.
- Do not install locking devices in the trigger guard; always keep your fingers and locking device outside the trigger guard during device installation and removal.
- Store firearms, ammunition and keys separately and securely, away from children and careless adults; do <u>not</u> store your firearm with the keys in the locking device.
- Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.
- While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Remember that any mechanical device can be bypassed with enough time, knowledge, determination and equipment.


LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY


Use the Correct Lock: Due to the different shapes of the many Ruger firearms, some firearms utilize different locking devices. The lock with the 3-1/2" shackle and clamp are for use with RUGER® 22 CHARGER™ PISTOL. It is very important to use the correct locking device!

To Install the Factory-Supplied Locking Device:

- 1. Keep the muzzle pointed in a safe direction and your fingers outside the trigger guard at all times!
- Be sure the firearm and its magazine are completely unloaded and contain no cartridges or cartridge cases! Remove the magazine from your firearm.
- 3. Open the action completely. Use the bolt lock to keep the action open during installation of the locking device.

- 4. For the 22 Charger™ Apply the clamp as shown in Figure 2a, below.
- 5. For the 22 Charger[™] Apply the lock by placing the shackle of the lock into the clamp as shown below in Figure 2b.
 - For the 22 ChargerTM Takedown <u>only</u> Insert the cable directly to your pistol as shown in Figure 2c.
- 6. For the 22 Charger™ Close the lock by pressing the shackle into the body of the lock (the part that receives the key) as tightly together as possible. The lock has bumpers and the shackle is coated with a non-marring material that will not harm the metal finish of your firearm; be careful not to dent or scratch wooden stocks.
 - For the 22 ChargerTM Takedown <u>only</u> To lock: With the key turned to the farthest clockwise position, insert the loose end of the cable into the lock. Turn the key counterclockwise and remove the key.
- 7. Once the lock is securely closed, remove the key and pull firmly on the lock to test the connection and be sure it is locked. Do not leave or store your firearm with the key in the lock! Store your locked unloaded firearm and the key in secure, separate locations, away from ammunition, children, or unauthorized adults.

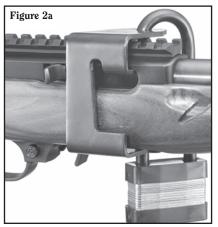

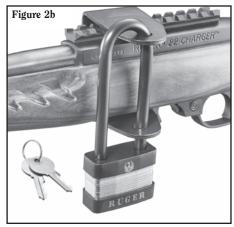

Correct Installation of Lock For Ruger® 22 Charger $^{\text{TM}}$ Pistol

