## EXTERNAL LOCKING DEVICE INSTALLATION INSTRUCTIONS



## WARNING – USE OF LOCKING DEVICES



Do not store keys in lock.

- Always keep your firearm pointed in a safe direction, including when you are installing or removing your locking device.
- Always verify that your firearm is completely <u>unloaded</u> before installing your locking device.
- Do <u>not</u> install locking devices in the trigger guard unless the instructions specifically require it; otherwise, always keep your fingers and locking device outside the trigger guard during device installation and removal.
- Store firearms, ammunition, and keys separately and securely, away from children and careless adults; do not store your firearm with the keys in the locking device.
- Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.
- While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Remember that any mechanical device can be bypassed with enough time, knowledge, determination, and equipment.

## LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY

It is important to use the locking device on your Ruger<sup>®</sup> firearm when the firearm is stored or immediate use is not planned.

Keep the muzzle pointed in a safe direction and your fingers outside the trigger guard at all times!

To Install the Factory-Supplied Locking Device:

- 1. Be sure the firearm and its cylinder are completely unloaded and contain no cartridges or cartridge cases!
- 2. Press and hold the base pin latch and completely remove the base pin and cylinder. Refer to the "Disassembly" section on p. 19.

- 3. Loop the cable through the cylinder frame and trigger guard (behind the trigger) as shown in Figure 5. Do not insert the cable directly into the trigger guard in front of the trigger! Only insert the cable as shown in Figure 5.
- 4. To lock: With the key turned to the farthest clockwise position, insert the loose end of the cable into the padlock. Turn the key counterclockwise and remove the key.
- 5. Once the lock is securely closed, pull firmly on the lock to test the connection and be sure it is locked. Do not leave or store your firearm with the key in the lock! Store your locked, unloaded firearm and the key in secure, separate locations, away from ammunition, children, and unauthorized adults.



Correct installation of the lock on a Ruger® Wrangler® revolver.